

User Manual

SM-8 Switch DMX Desk Station





Table of Contents

- Description
- Specifications & Connections
- Programming
- Safety & Troubleshooting
- Contact Us

Description

The SM-8 Switch

The SM-8 Switch is the easiest way to control your DMX lighting for everyday use. It requires no installation and features 8 easy-to-program scenes with built-in fade times. The SM-8 Switch is a desk station designed to sit on any flat surface and is expandable to up to 5 Satellite Wall Stations. The namesake feature of the SM-8 Switch is a built-in switch for transferring control from this unit back to your lighting console, and vice versa. When control is switched back to the controller, the SM-8 Switch and optional Wall Stations become inoperable. The SM-8 Switch needs a controller to be programmed, but once programmed, it can operate independently.



SKU: SM-8 Switch



Switch control to your console/computer

Switch control to your SM-8 Switch

Specifications


Dimensions



Weight: 1.7lbs

Connections

- 3-pin DMX In/Out
- Permanently Attached Edison Cable
- Ethernet Port For Expansion To Satellite Stations

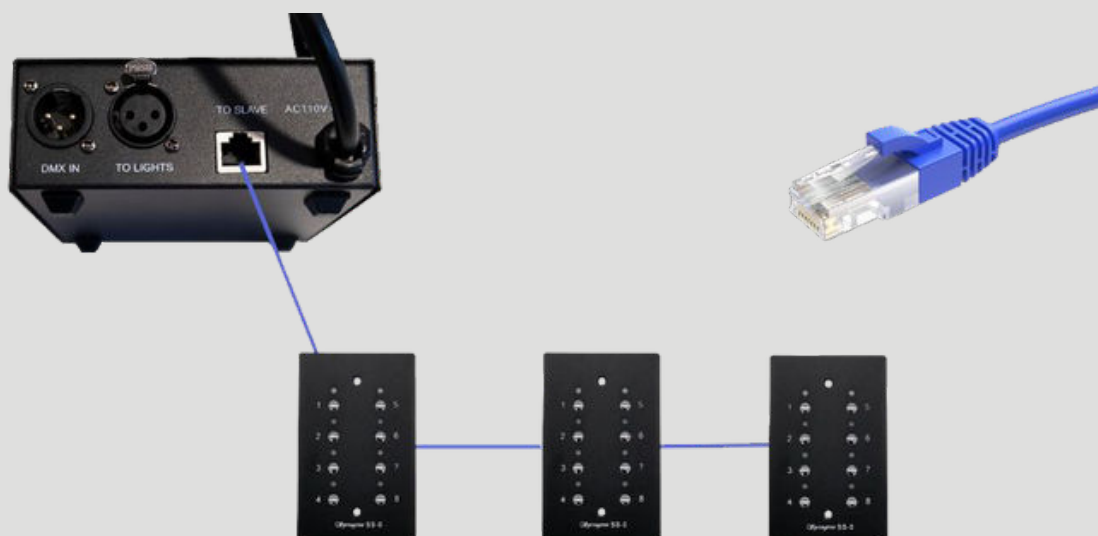

Programming

1. Hold down buttons 1 and 8 to enter programming mode (light will turn red).
2. Set desired look on lighting console.
3. Press desired preset button 1-8. Light will flash. Scene is stored.
4. Set new look on lighting console.
5. Press another unused button or record over existing scene by selecting button.
6. Repeat until all 8 scenes are recorded.
7. Hold down buttons 1 and 8 to exit programming mode.

Setting Fade Rate

1. Hold down buttons 2 and 7 to enter secondary programming mode for setting fade rate (light turns yellow).
2. Select 1 for 1 second. 2 for 2 seconds. 3 for 3 seconds. 4 for 4 seconds and 8 for instant (no fade rate).
3. Hold down 2 and 7 to exit program mode.

Indicator LEDs Color Guide

If DMX is present at the wall station from a console, DMX passes and the wall station is inoperable.

Purple/Pink - DMX Is Present From The Console

Blue - Wall Station Is Operable, No DMX Is Coming From The Console

Red - Program Mode

Green - Program Mode, But No DMX

Yellow - Setting Fade Rate Mode

Safety

1. Do not expose this unit to moisture to reduce the risk of electrical shock or fire.
2. Be sure that the local power outlet matches the required voltage for your unit.
3. Do not attempt to operate this unit if the power cord has been frayed or broken. Do not attempt to remove or break off the ground prong from the electrical cord. This prong is used to reduce the risk of electrical shock and fire in case of an internal short.
4. This fixture is intended for indoor use ONLY!

Troubleshooting

1. Check that the DMX cables are connected properly and are wired correctly.
2. Check that the Switch is flipped to the setting you need. “DMX On” gives control to your console/computer. “DMX Off” gives control to your SM-8 Switch and optional Satellite Stations.

We Are Here For You!

Springtree is all about simplifying the AV process. A big part of that is being available to answer your questions. Give us a call or fill out a contact form. We are here to help!

Contact Us



 springtree.net/contact-us/

 615-599-1505



[Contact Form]